


UTILITY FRONT TRAY INSTALLATION


For Benno® eJoy, eScout, RemiDemi, Carry On and selected Boost E (2018/19)

**READ CAREFULLY BEFORE INSTALLATION AND USAGE.
TO BE INSTALLED BY MECHANIC AT AUTHORIZED BENNO DEALER.**

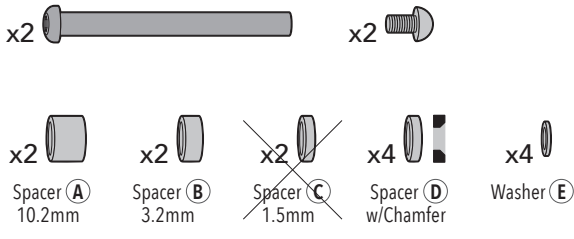

**IMPORTANT: FOR BOOST E 2020 AND LATER
USE BOOST E 2020 INSTALLATION MANUAL.**

**PLEASE NOTE: SPACER C IS NOT
NEEDED FOR INSTALLATION TO EJOY,
ESCOUT, REMIDEMI, CARRY ON AND
SELECTED BOOST E (2018/19).**

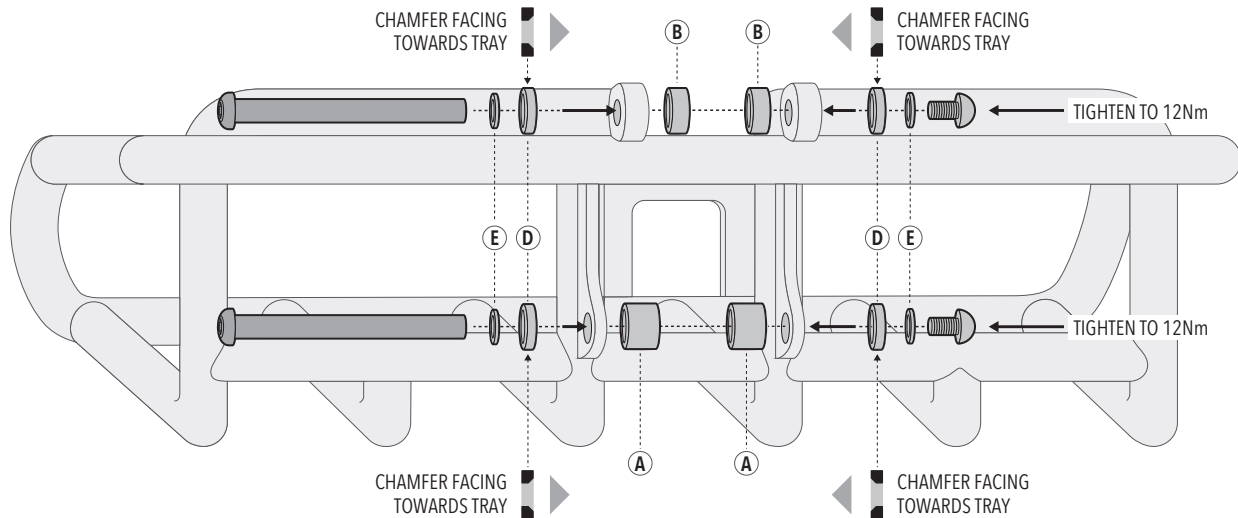

IMPORTANT: Notes to mechanic: See diagram. Install Benno Utility Front Tray only on compatible Benno Bikes and use only pre-drilled holes and fittings. Bolts are to be tightened to 12Nm. Do not mount to damaged bikes or if tray is damaged. Use only original Benno hardware included. Do not modify tray, mounting points on bike, change position or drill new holes as this will void any warranties and/or claims for liability. Ensure firm and proper installation and safe clearance to the front wheel and headlight.

Notes to owner: Periodically check to make sure the nuts and bolts remain tight as vibrations may loosen them. Always make sure no parts of the body or clothing come near moving parts on the bicycle such as chain, spokes, tires or brakes

WARNING: BENNO UTILITY FRONT TRAY IS DESIGNED TO CARRY CARGO ONLY - NO PASSENGERS. SECURE YOUR LOAD FIRMLY AND ENSURE SAFE CLEARANCE TO THE FRONT WHEEL AND HEADLIGHT. DO NOT EXCEED MAX LOAD INDICATED ON TRAY OR MAX GROSS WEIGHT OF BIKE INDICATED ON LOWER SEAT TUBE OF BIKE.